 


# AIKO SYNCRO-QUICKSHIFT® MECHANISM

## OPERATING INSTRUCTIONS

### Seat Depth

To adjust:  
While holding the backrest with left hand press and hold button with right hand and move the seat to desired position using your torso. Release button to lock in desired position.

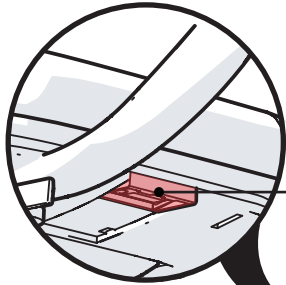

### Variable Backrest Lock

To unlock:  
Take weight off backrest and turn the lever upwards to unlock position.

To adjust and lock:

Lean backwards on backrest to desired position and turn the lever downward to lock.

 


### Optional Lumbar Support (height)

To adjust:  
Pull the lumbar support upward or downward using both hands. Ideally, the height of the lumbar support should be at the level of your belt.

### Adjustable Arms

Height-adjustable (4 in)  
To adjust:  
Press and hold button to desired height, release button to lock.

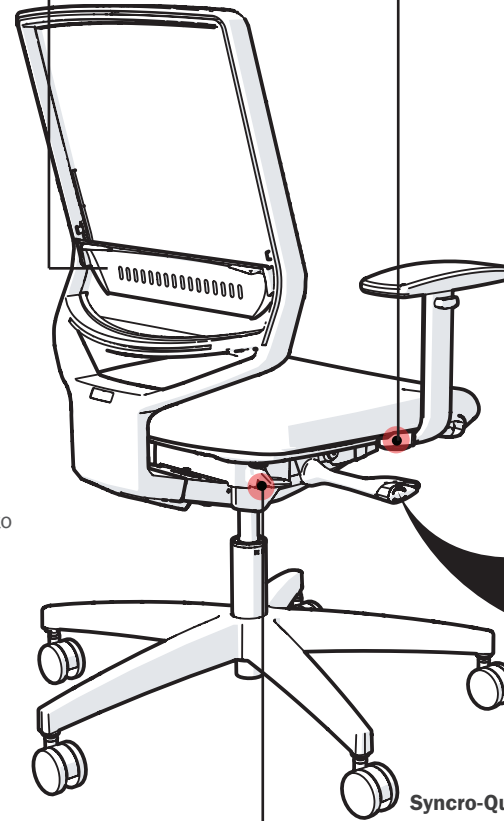

### Seat Tilt Adjustment

To adjust:  
Locate the rear lever on the back, right hand side of the seat.  
Rotate lever up or down to adjust the tilt.

 
### Adjustable Arms (Depth)

To adjust:  
Pull the lever outwards directly underneath the arm. Once positioned to desired depth, lock the lever back in.

### Seat Height


To raise:  
Take your weight off the seat, pull the lever upwards, release the lever when the seat is at the desired height.

To lower:  
Place your weight on the seat, pull the lever upwards, release the lever when the seat is at the desired height.

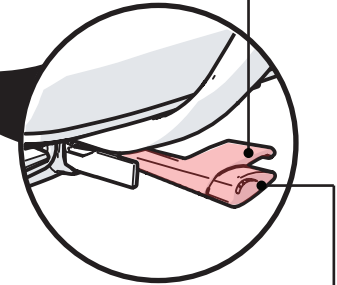


### Syncro-Quickshift® Mechanism

 To Enhance the Backrest Tension:  
Turn the end of the lever clockwise.



 To loosen the Backrest Tension:  
Turn the end of the lever counter-clockwise.



MECH: 40-0852-240

\*Optional features may not be included

All specifications subject to change without notice.

Any servicing of your Dauphin Chair must be performed by an authorized Dauphin Dealer.

USA: 100 Fulton Street Boonton, NJ 07005 TEL: 800.631.1186 FAX: 800.220.3844 EMAIL: info@dauphin.com WEB: dauphin.com AK.01.12.09.16

# DAUPHIN